


一、Email Setting 1 as IP

Please set as follows, I use Email server: www.gmail.com as an example.


1. Find the gmail IP address.




A, Click Start> Run in you computer.

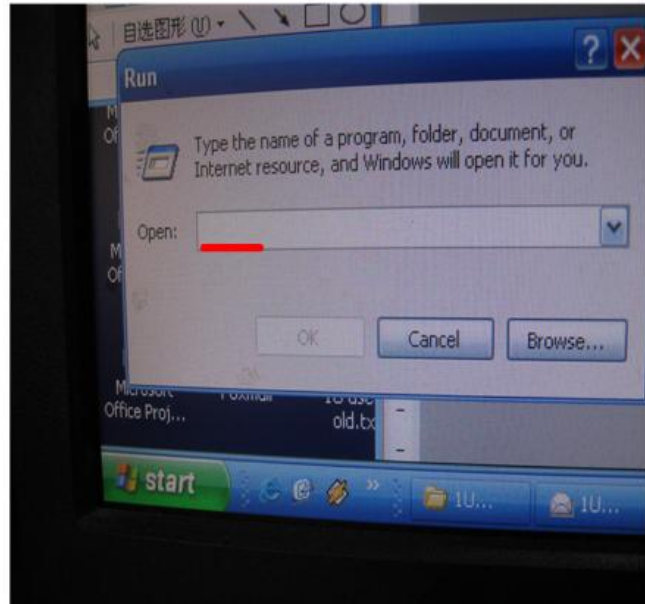

B, Enter cmd and click ok, then you will see the step C

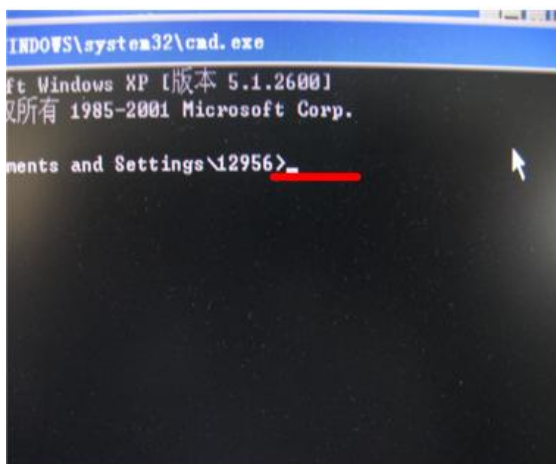


C, Enter ping smtp. Gmail.com same in d step with red underline.

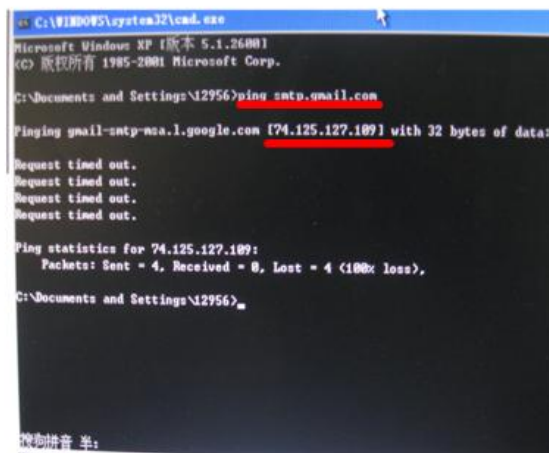

D, So you can see the gmail ip address --- 74.125.127.109


2. Setting details.

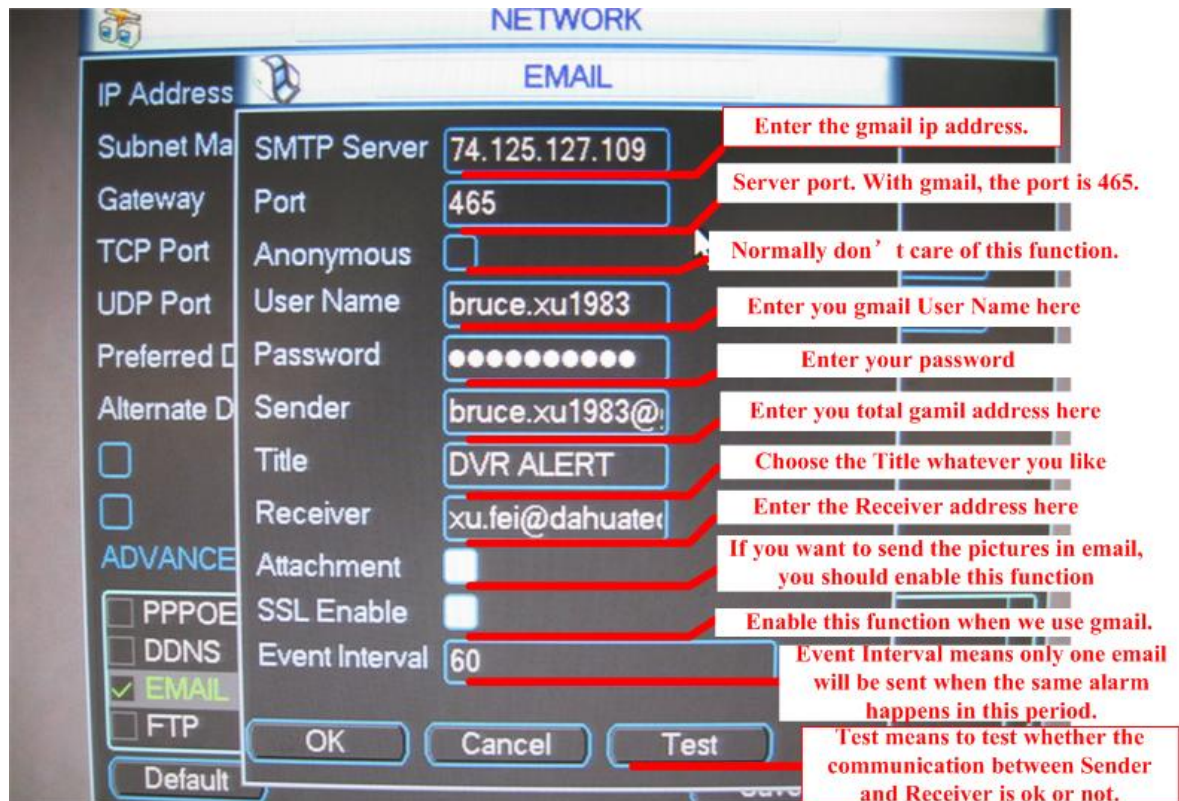


- A、 Ping the Email server to get the ip address, e.g.: ping smtp.gmail.com to get ip:74.125.127.109
- B、 Input user name and password of your account e.g.:
Username:digitalcctv3000
Password:19780813
- C、 Input sender: must the whole Email address of the sender,
e.g: digitalcctv3000@gmail.com
- D、 Set Subject as your Email title: you can set any title according your need
- E、 Input receiver email address

二、Email Setting 2 as SMTP


1. Email & DNS Settings

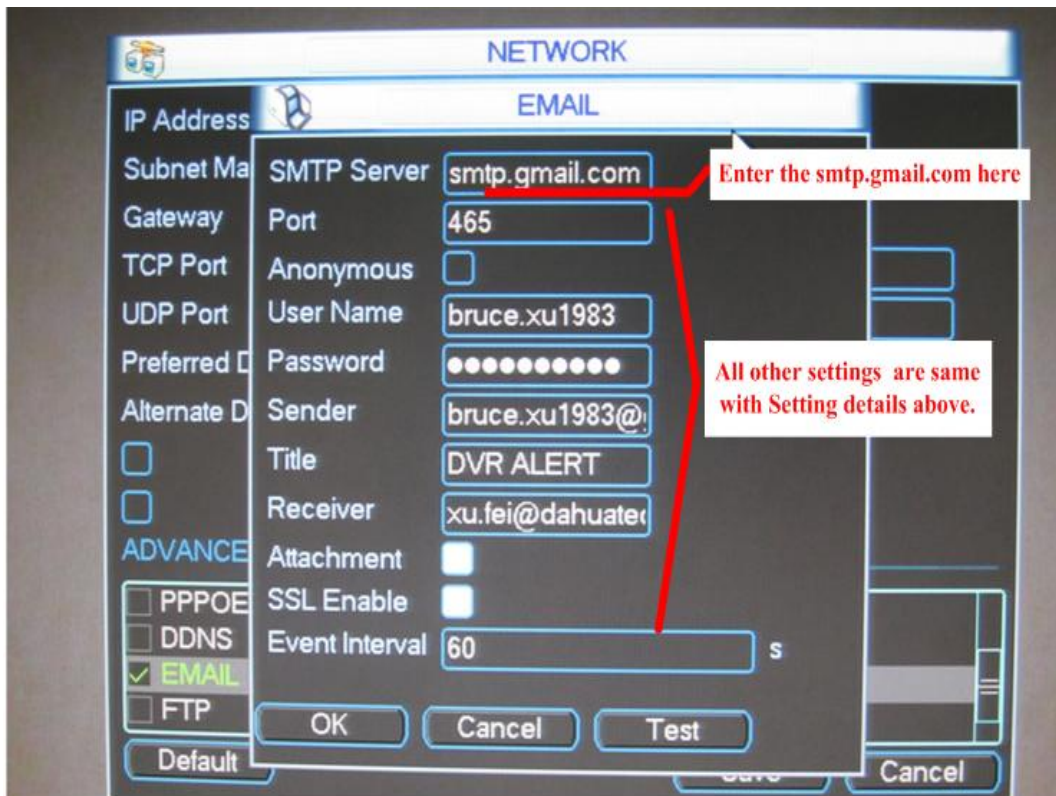

(1)

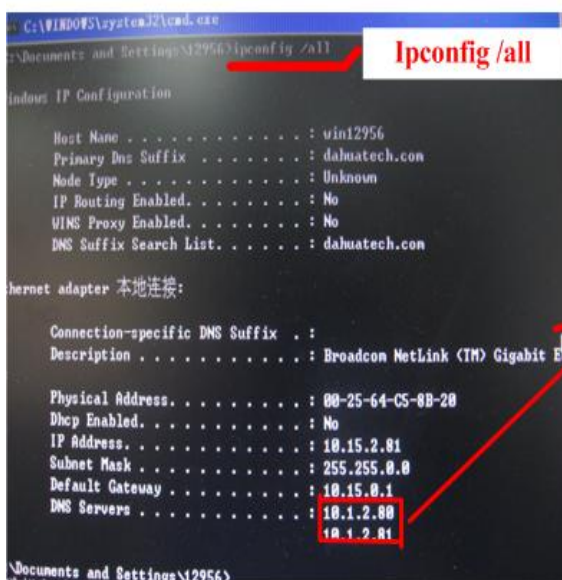

(2)

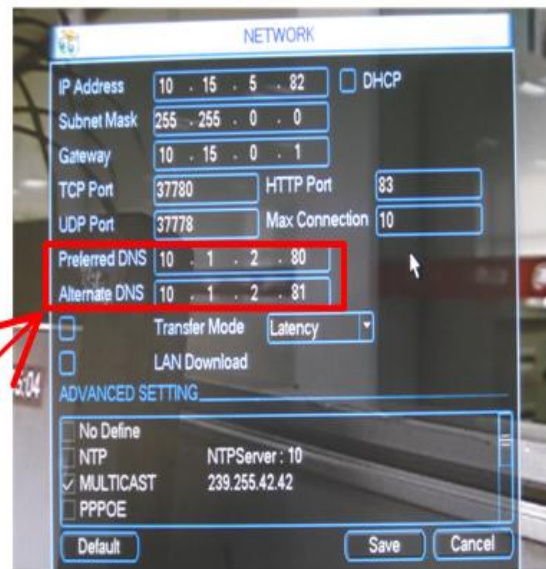


(3)

From computer's Start > Run, then Enter cmd to enter this interface (You can see the same steps in previous pictures). Then enter ipconfig /all to find the information of local computer. You can find the DNS Server in red square frame.

Enter the DNS address in red square frame

三、Enable email function

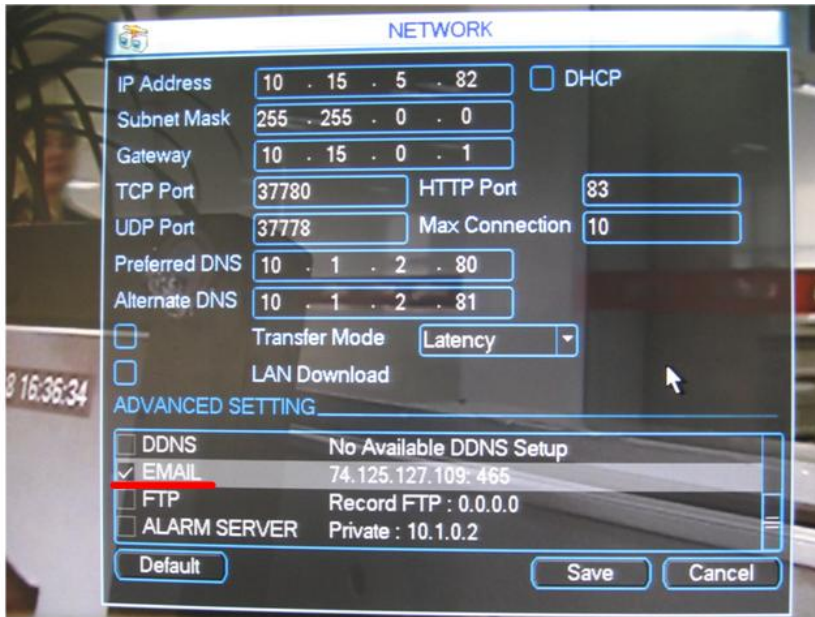

(1)

When you finish the Email settings, you need to tick to enable this function.



(2)

Both in DETECT and ALARM, you should choose this function, only in this way, email will be sent.

四、Check your E-mail Box.



(1)

You will only receive message(1) except you enable the attachment function in EMAIL interface.

(2)