


Redundancy Setting

Redundancy is similar to Raid1 or mirror recording, that means you can record the video double to 2 different HDDs (working HDD and redundancy HDD), if one HDD was broken , you can find recordings from redundancy HDD


- 1、 If the DVR have more than 1 HDD, you can set some HDDs to **Redundant**, (the Redundant according your needs)

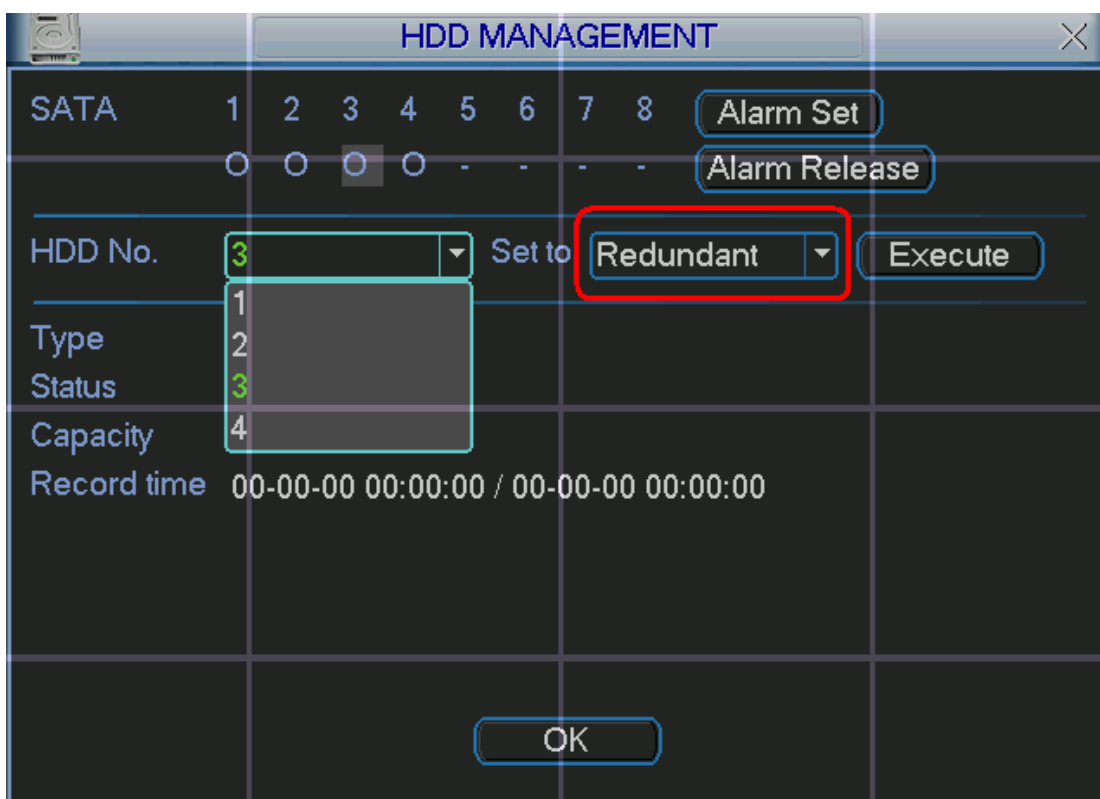

- A、 E.g.: if you install 6HDDs, you can set
1 read/write HDD, 5 redundant HDD
2 read/write HDD, 4 redundant HDD
3 read/write HDD, 3 redundant HDD
4 read/write HDD, 2 redundant HDD
5 read/write HDD, 1 redundant HDD

- B、 The Redundant HDD will auto overwrite according first in first out rule

- C、 You can not search and view recordings in Redundant HDD, if you want to search and playback it, please set the redundant HDD to **Read only**

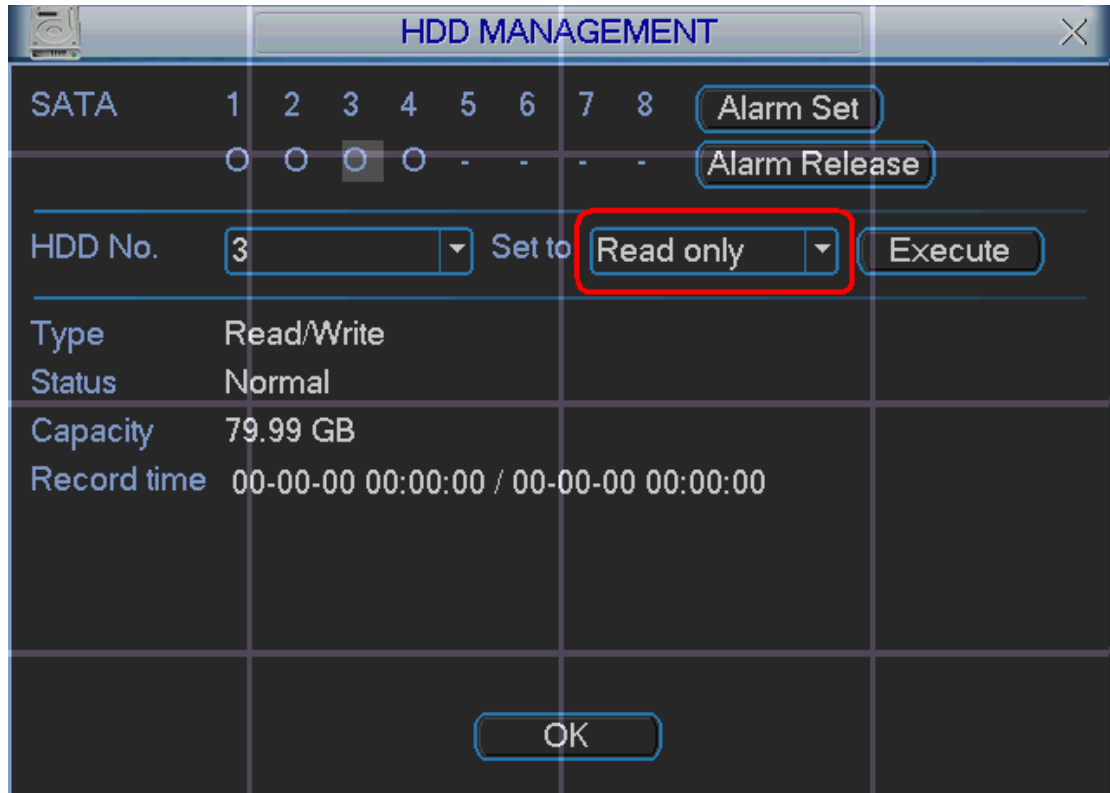

2、 You can choose the wanted cameras do redundant recordings

