

How to use audio and talking function for IPC

1. Make sure your IPC can support audio in and audio out

Audio? NO!




Audio? Yes!



There's no audio cable for these cameras.


But there's an audio port in it. You need to connect them by yourselves.

2. How to connect IPC, NVR and PC

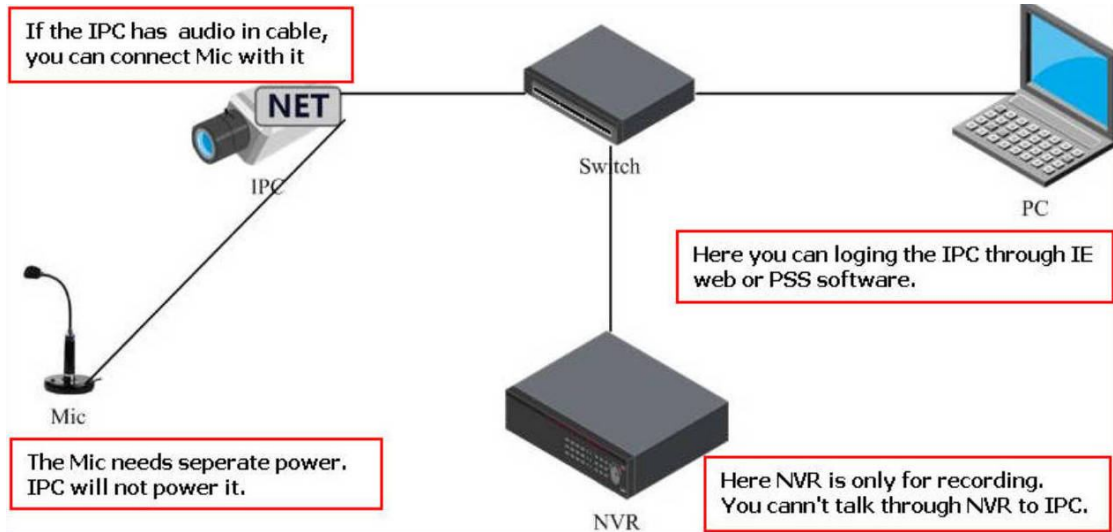


Here NVR is optional. It's for recording the video and audio.

3. How to config in IPC

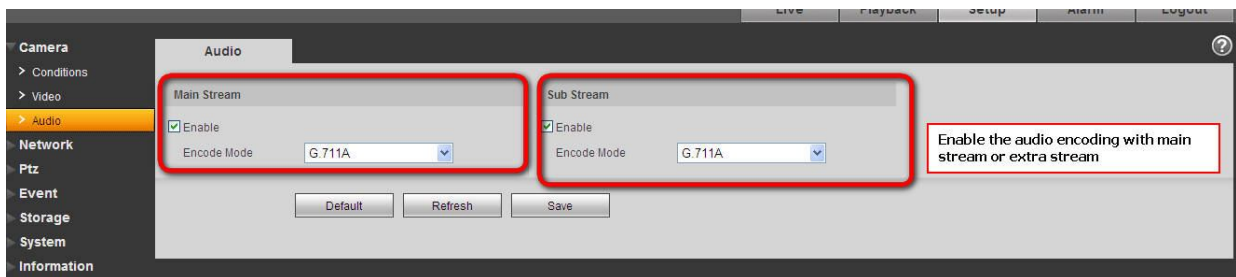

4. How to config in web or PSS software

IE Web configuration:

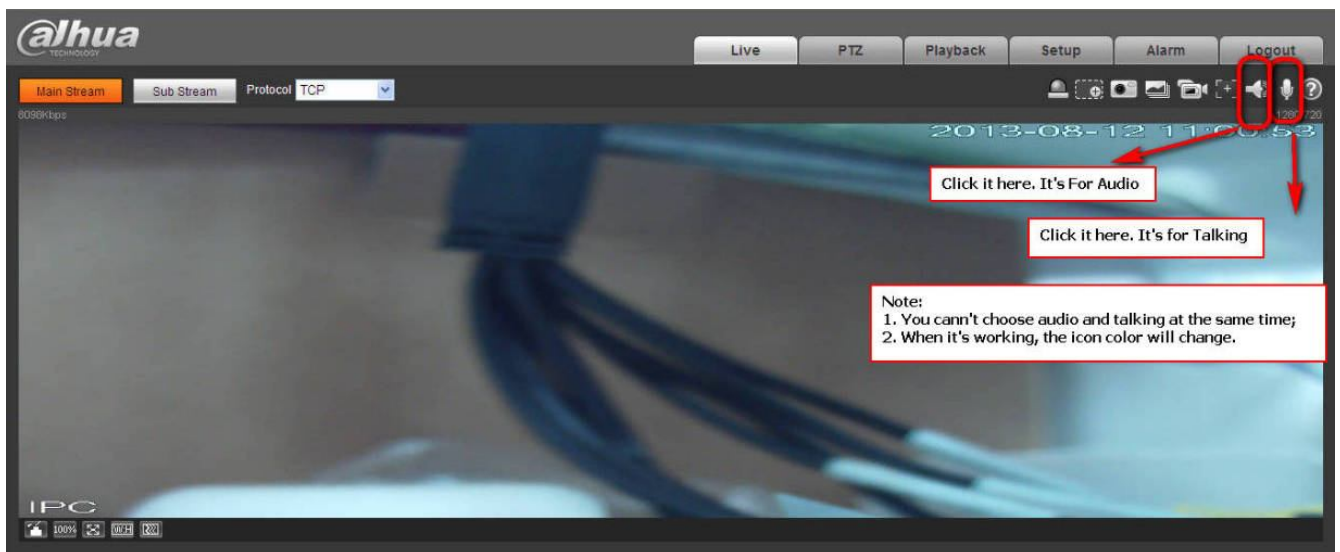

PSS configuration

