
DSS4004S2 Product Update Guide

1. Preparation

Note: If on-site data backup is required, back up accordingly before update as follows:

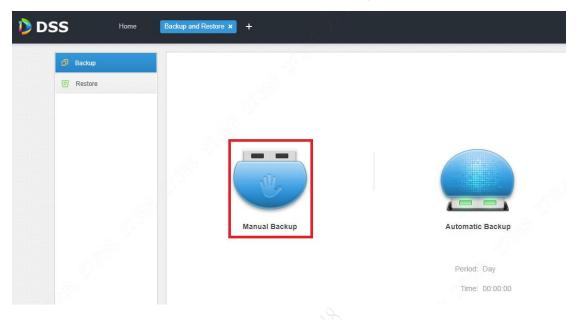

2. If DSS is updated from version 1.000.0000000 to version 1.000.0000001, make sure on site that the CMS port and the MQ port are at default settings (it is not allowed to modify these two ports for version 1.000.0000001).

D	DSS ^{config} 📩 🕞 🗔		, 3 ⁵ . 9,			Master
7	Quick Guide	that we have a thread and a first sector of the sector of	internal and external mapping o eed to change port setup.(The N	and the second		
2	Segment Setup	Local Address:	10.35.94.20			
	TCP/IP	WEB:	80			
>	LAN/WAN Mapping					
٢	Basic 🗸	Router Address:				
	Security Setup	CMS 0: 9000	DMS 0:	9200	MTS 0:	9100
	SSH Connection Setup	SS 0: 9320			PES 0:	9400
	HTTPS Setting	ARS 1: 9500	MGW ():	9090	PTS 0:	8081
	Self-check	MQ 1: 6161	6 WEB 1:	80		

3. Download ConfigTool

Enter IP/config in the browser to open the following screen: Click **Download Config Tool**.



 Open ConfigTool and log into the platform to be updated. Default Port: 3800 Default User Name: admin Default Password: The login password for the config screen.

SN	IP Address	And the second second	Port	Subnet Mask	Default Ga	Mac Address	Device Type	H
L	10.33.68.53		37777	255.255.255.0	10.34.3.1	18-66-DA-00-18-12	PC-NVR	8
	10.33.68.65		37810	255.255.255.0	10.33.68.254	f4:8e:38:af:79:30	DSS Windows	8
1.000	10.33.68.86		37810	255.255.255.0	10.33.68.254	30:9c:23:79:5a:be	DSS Windows	8
	10.33.68.88		37810	255.255.255.0	10.33.68.254	34:17:eb:c5:0d:8c	DSS Windows	8
	10.33.68.60		37810	255.255.255.0	10.33.68.254	8c:dc:d4:36:94:ac	DSS Windows	8
	10.33.68.29		37777	255.255.255.0	10.34.3.1	18-66-DA-00-18-12	PC-NVR	8
	10.33.68.50	(00040	0000 000 000 0	10 00 00 004	48:e6	DSS Windows	8
	10.33.68.48	Login				23 -CFI	PC-XXX05	8
	10.33.68.6	_				-CFI	PC-XXX05	8
0	10.33.68.26			· · · · · · · · · · · · · · · · · · ·			DSS Windows	8
1	10.33.68.33	IP	Address:	10.35.92.70)c:f0	DSS Windows	8
2	10.33.68.18					.2:88	DSS Windows	8
3	10.33.68.37	LIS IS	er Name:	admin		а5:9Ъ	DSS Windows	8
4	10.33.68.82		er rienne.			le:a5	DSS Windows	8
5	10.33.68.96			*****		22:ac	DSS Windows	8
6	169.254.225.77	Pa	ssword:	******		IF:50	PC-NVR-V3.0	8
7	10.33.68.64			April 14 m 2 Catholine)0:CE	PC-NVR-V3.0	8
8	172.11.1.177	Po	ort:	3800		90:21	NVR	8
9	172.11.1.183			1		ef:38	NVR	8
0	172.11.1.146			2 2 4 4 4 4 4 4 4 5 5 4 4 5 5 5 4 5 5 5 5	10 million 10 million and 10 million	2b:b9	NVR	8
1	172.11.1.125			Login	Cancel	5f:69	NVR_TELNET	8
2	172.11.1.114	1 2 2 2 2 2 2				.2:73	NVR	8
3	172.11.1.112	<u></u>	00000	055 055 0 0	150 11 0 1	11:9e	DHI-NVR58	8
4	172.11.1.30		37777	255.255.0.0	172.11.0.1	90:02:a9:da:93:d8	NVR	-
5	172.11.1.12		37777	255.255.0.0	172.11.0.1	20:17:12:19:11:33	DH-IVSS716D	8
		the state of the state of the		111				

5. Log into the platform, click **Open** to select the corresponding update package (.BIN file), and then click **Upgrade**.

NetWork Parameter PPPOE System Information System Upgrade Upgrade Information Upgrade File: E:\DSS4004S2\DSS4004S2\General_DSS4004S2 Open Current Progress: Upgrade	•
Upgrade File: E:\DSS4004S2\DSS4004S2\General_DSS4004S2_ Open	
Current Progress:	
Return	

a a construction of a construction	3 System Information System Upgrade	
rade Information —		
Upgrade File:	E:\DSS4004S2\DSS4004S2\General_DSS4004S2_ Open	
Current Progress:	Upgrade	
🕵 打开		×
查找范围(I):	😼 General_DSS4004S2_Eng_Basic_V1.000.0 🗸 🗧 🖆 🎬 🗸	
(Finite States)		修改
最近访问的位	General_DSS4004S2_Eng_Basic_V1.000.0000000.0.R.20180829.BIN	2018
最近访问的位 置		
_		
桌面		
唐		
计算机		
计算机		
	< III	•
计算机	<	•

- 6. After update, the system will reboot automatically.
- 7. After system reboot, visit the IP/config screen in the browser and log in (the default User Name: admin).



8. Basic -> Maintenance -> Restore Default

Note: This will restore the device to the factory defaults and clean up the files of the previous version. Cleanup is allowed in case of any abnormality after update and no need to archive any old data on site.

