HD Mini Network Dome Camera User's Manual

Version 1.0.0

Welcome

Thank you for purchasing our network camera!

This user's manual is designed to be a reference tool for your system.

Please read the following safeguard and warnings carefully before you use this series product!

Please keep this user's manual well for future reference!

Important Safeguards and Warnings

1 . Electrical safety

All installation and operation here should conform to your local electrical safety codes.

The power shall conform to the requirement in the SELV (Safety Extra Low Voltage) and the Limited power source is rated 12V DC or 24V AC in the IEC60950-1. (Refer to general introduction) **Please note: Do not connect these two power supplying sources to the device at the same time; it may**

result in device damage!

We assume no liability or responsibility for all the fires or electrical shock caused by improper handling or installation.

We are not liable for any problems caused by unauthorized modification or attempted repair.

2. Transportation security

Heavy stress, violent vibration or water splash are not allowed during transportation, storage and installation.

3 . Installation

Do not apply power to the camera before completing installation. Please install the proper power cut-off device during the installation connection. Always follow the instruction guide the manufacturer recommended.

4 . Qualified engineers needed

All the examination and repair work should be done by the qualified service engineers. We are not liable for any problems caused by unauthorized modifications or attempted repair.

5. Environment

This series network camera should be installed in a cool, dry place away from direct sunlight, inflammable, explosive substances and etc.

Please keep it away from the electromagnetic radiation object and environment.

Please make sure the CCD (CMOS) component is out of the radiation of the laser beam device.

Otherwise it may result in CCD (CMOS) optical component damage.

Please keep the sound ventilation.

Do not allow the water and other liquid falling into the camera.

Thunder-proof device is recommended to be adopted to better prevent thunder.

The grounding studs of the product are recommended to be grounded to further enhance the reliability of the camera.

6. Daily Maintenance

Please shut down the device and then unplug the power cable before you begin daily maintenance work.

Do not touch the CCD (CMOS) optic component. You can use the blower to clean the dust on the lens surface.

Always use the dry soft cloth to clean the device. If there is too much dust, please use the water to dilute the mild detergent first and then use it to clean the device. Finally use the dry cloth to clean the device.

Please put the dustproof cap to protect the CCD (CMOS) component when you do not use the camera. Dome enclosure is the optical component, do not touch the enclosure when you are installing the device or clean the enclosure when you are doing maintenance work. Please use professional optical clean method to clean the enclosure. Improper enclosure clean method (such as use cloth) may result in poor IR effect of camera with IR function.

7. Accessories

Be sure to use all the accessories recommended by manufacturer.

Before installation, please open the package and check all the components are included. Contact your local retailer ASAP if something is broken in your package.

Accessory Name	Amount
Network Camera Unit	1
Installation Accessories bag	1
Quick Start Guide	1
CD	1

Table of Contents

1	Genera	al Introduction1
	1.1	Overview
	1.2	Features1
	1.3	Specifications
	1.	3.1 Performance2
2	Frame	work4
	2.1	Structure4
	2.2	Dimensions5
3	Installa	ation7
	3.1	Device Installation7
4	Quick	Configuration Tool9
	4.1	Overview9
	4.2	Operation9
5	Web O	peration11
	5.1	Network Connection11
	5.2	Login and Main Interface11
6	FAQ	
Ар	pendix T	Foxic or Hazardous Materials or Elements14

1 General Introduction

1.1 Overview

This series network camera integrates the traditional camera and network video technology. It adopts audio and video data collection, transmission together. It can connect to the network directly without any auxiliary device.

This series network camera uses standard H.264 video compression technology and MJPEG audio compression technology, which maximally guarantee the audio and video quality.

This series network camera enclosure has the strong resistance capacity, which can guarantee the proper work performance under heavy strike. It supports real-time monitor and motion detect function.

It can be used alone or used in a network area. When it is used lonely, you can connect it to the network and then use a network client-end. Due to its multiple functions and various uses, this series network camera is widely used in many environments such office, bank, road monitor and etc.

1.2 Features

User Management	 Different user rights for each group, one user belongs to one group. The user right shall not exceed the group right.
Storage Function	 Support central server backup function in accordance with your configuration and setup in schedule setting Support record via Web and the recorded file are storage in the client-end PC. Support network storage such as FTP.
Alarm Function	 Real-time respond to video detect as user pre-defined activation setup and exert corresponding message in screen and audio prompt(allow user to pre-record audio file) Real-time video detect: motion detect, camera masking. Can generate an alarm when network abnormal, Micro SD card abnormal event occurred.
Network Monitor	 Network camera supports one-channel video data transmit to network terminal and then decode. Delay is within 270ms (network bandwidth support needed) Max supports 20 connections. Adopt the following audio and video transmission protocol: HTTP, TCP, UDP, RTP/RTCP, RTSP and etc. Support web access, widely used in WAN.
Network Management	 Realize network camera configuration and management via Ethernet. Support device management via web or client-end. Support various network protocols.
Power	 External power adapter DC12V Support PoE. Warning! Do not connect these two power supplying sources to the device at the same time; it may result in device damage!
Assistant Function	 Log function Day/Night mode auto switch. Backlight compensation: screen auto split to realize backlight compensation to adjust the bright. Support digital WDR. Support system resource information and running status real-time display.

Support video	watermark fur	nction to avoid	vicious video	modification.

- Support electronic shutter and gain setup. Support dual bit stream, support ACF.
- •

1.3 Specifications

•

•

1.3.1 Performance

Please refer to the following sheet for network camera performance specification.

Parame	Model	IPC-HD1100C	IPC-HD1105C					
System	Main Processor	High performance DSP						
stei	OS	Embedded LINUX						
3	System	Support real-time network, local re	cord, and remote operation at the					
	Resources	same time.						
	User Interface	Remote operation interface such a						
	System Status	SD card status, bit stream statistic	s, log, and software version.					
Vic	Image Sensor	1/4-inch CMOS						
leo	Pixel	1280(H)*720(V)						
Video Parameter	Day/Night Mode	Support day/night mode switch.						
Ime	Gain Control	Fixed/Auto						
ter	White Balance	Manual/Auto	Manual/Auto					
BLC exposure	exposure mode is auto with range	cker is outdoor and is valid only when 1-100)						
	Electronic Shutter	Manual/Auto PAL: It ranges from 1/3 to 1/10000. NTSC: It ranges from 1/4 to 1/10000.						
	Video Compression Standard	H.264/H.264B/MJPEG						
	Video Frame Rate	PAL: Main stream (1280*720@25fps) Extra stream (704*576@25fps) NTSC: Main stream (1280*720@30fps)						
		Extra stream (7200 720@30fps)						
	Video Bit Rate	H.264: 16Kbps-8192Kbps, adjusta MJPEG adjustable and bit rate is a Support customized setup.						
	Video Flip	Support mirror function. Support flip function.						
	Snapshot	Max 1f/s snapshot. File extension	name is JPEG.					
	Privacy Mask	Supports max 4 privacy mask zone	es					
	Video Setup	Support parameter setup such as	bright, contrast.					
	Video Information	Channel title, time title, motion dete	ect, privacy mask.					
	Lens	2.8mm/3.6mm/6mm/8mm MP						
	Lens Interface	M12. Lens is the default accessori						
Video	Motion Detect	threshold ranges from 0 to 100.	itivity level ranges from 0 to 100; area age snapshot, log, email function and					

	Video Loss	Activation event: video storage, ima etc.	ge snapshot, log, email function and	
	Wire Network	1-channel wire Ethernet port, 10/100) Base-T Ethernet	
Network	Network Protocol	Standard HTTP, TCP/IP, IPv4/IPv6, UDP, SMTP, FTP, DHCP, DNS, DD SNMP.		
Platform interface ONVIF Standard	ONVIF			
	Remote Operation	Monitor, system setup, log information, maintenance, upgrade and etc		
AUX Interf ace	Reset	Built-in RESET button		
G	Power	Support DC12V and PoE Note: 05 series do not support PoE.		
General Parameter	Power Consumption	DC 12V 3.1W MAX	DC 12V 2.5W MAX	
I Para	Working Temperature	-30℃~+60℃		
amete	Working Humidify	≪95%		
Ч, Ч	Dimensions(m m)	¢110×54		
	Weight	200g(excluding package)		
	Installation	Installed in the places such as wall of	or the ceiling	

2 Framework

2.1 Structure

Please refer to the following figure for detailed information. See Figure 2-1.

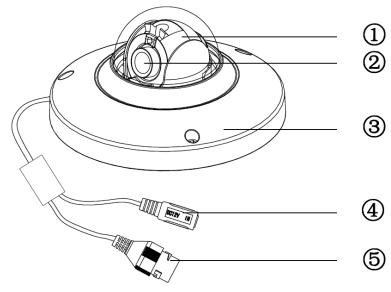


Figure 2-1 Structure

Please refer to the following sheet for detailed structure information.


SN	Name
1	X-Y-Z rotation module
2	Device lens
3	Dome camera enclosure

Please refer to the following sheet for detailed port information.

SN	Name	Function
4	Power input port	Connect to the DC 12+ power to input the power.
5	Network port	 Network data input, output and PoE. Note: Some devices do not support PoE. Before making crystal head, pull the anti-dust, waterproof cover through network cable.

2.2 Dimensions

Please refer to the following figure for the dimension information. The unit is mm. See Figure 2-2 through Figure 2-4.

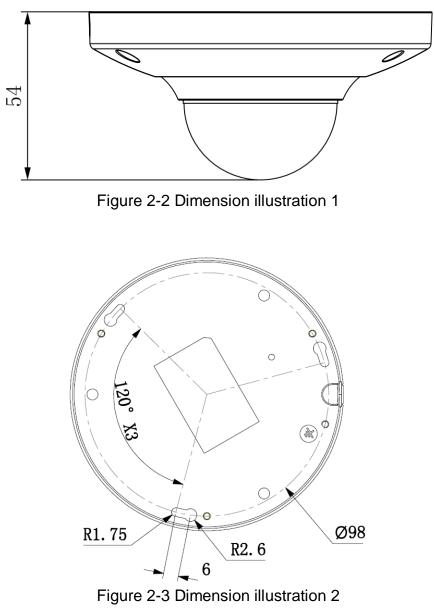

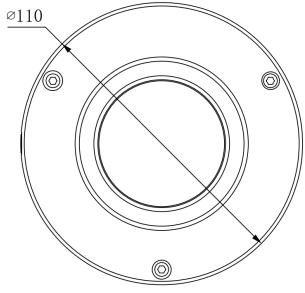


Figure 2-4 Dimension illustration 3

3 Installation

3.1 Device Installation

Important

Please make sure the installation surface can min support the 3X weight of the camera and the bracket.

Please refer to the steps listed below.

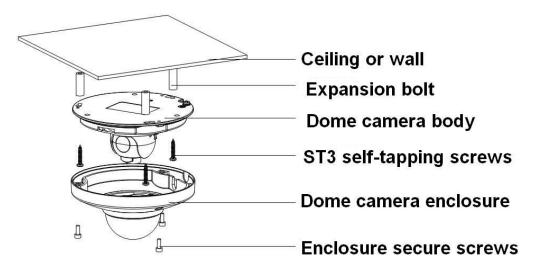


Figure 3-1 Device installation illustration 1

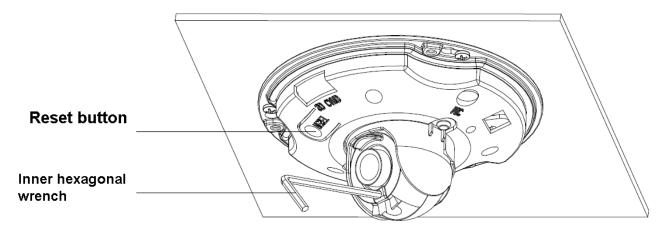


Figure 3-2 Device installation illustration 2

<u>Step1</u>

Use the inner hexagonal wrench (provided) to loose the three inner hexagon screws in the dome cover and then open the cover.

<u>Step 2</u>

Please take the installation map in the accessories bag, and then paste it on the ceiling or the wall according to your monitor area requirements.

Step 3

Draw and then dig three plastic expansion bolts holes on ceiling or other installation surface and then insert three expansion bolts in the holes. Secure these three bolts firmly.

Note:

- Please dig a "cable exit hole" in the surface according to the installation map if you want to draw out the cable from the top of the installation surface.
- You need to use the proper tool to open up the side port of the U-cable channel of the dome camera pedestal if you want to draw out the cable from the side port of the cable channel when you are installing the device cable. And then you can draw out the cable from the cable channel of the pedestal.

Step 4

Adjust the device installation pedestal to the proper position and then draw the cable through the cable exit you just dug in the ceiling (wall). Line up the TOP direction of the device to the installation map and then line up the three screw holes in the device pedestal to the three plastic expansion bolt holes in the installation position. Put the three self-tapping screws in the three plastic expansion bolts firmly. Now the dome camera is secure in the installation surface.

<u>Step 5</u>

Loosen the two M3 secure screws of the lens rotation structure (Do not remove, loosen a little bit will be OK.). Use the inner hexagonal wrench to insert them to the inner hexagonal holes and then use the wrench to turn the lens. Adjust the lens to the proper monitor angle and then secure the screws of the lens rotation structure. The lens adjust angle ranges are: flip $(0^{\circ} + 75^{\circ})$, video pan rotation $(-15^{\circ} + 15^{\circ})$, video rotation angle $(-15^{\circ} + 15^{\circ})$.

Step 6

Line up the dome camera cover to the cable exits and put the cover back. Use the inner hexagonal wrench to secure the three inner hexagonal screws firmly. Now the installation completed.

Note:

If you want to restore default settings of device, you shall open device front cover, and press Reset button in Figure 3-2 for 10s.

4 Quick Configuration Tool

4.1 Overview

Quick configuration tool can search current IP address, modify IP address. At the same time, you can use it to upgrade the device.

Please note the tool only applies to the IP addresses in the same segment.

4.2 Operation

Double click the "ConfigTools.exe" icon, you can see an interface is shown as in Figure 4-1. In the device list interface, you can view device IP address, port number, subnet mask, default gateway, MAC address and etc.

SN	IP Address	Port	Subnet Mask	Default Gateway	Mac Address
l)	192.168.1.108	37777	255.255.255.0	192.168.1.1	90:02:a9:7b:50
e 1					>
Tip:	You can click "login" button	directly and			
then	. input corresponding informat	ion to login.			
<] Tip: then	You can click "login" buttor input corresponding informat	directly and ion to login.			

Figure 4-1 Search interface

Select one IP address and then right click mouse, you can see an interface is shown as in Figure 4-2. Select the "Open Device Web" item; you can go to the corresponding web login interface.

SN	IP Address	Port	Subnet Mask	Default Gateway	Mac Address
-	192.168.1.108 Open Device Web	37777	255, 255, 255, 0	192, 168, 1, 1	90:02:49:76:5
		_			
1		- m			

Figure 4-2 Search interface 2

If you want to modify the device IP address without logging in the device web interface, you can go to the configuration tool main interface to set.

In the configuration tool search interface (Figure 4-1), please select a device IP address and then double click it to open the login interface. Or you can select an IP address and then click the Login button to go to the login interface. See Figure 4-3.

In Figure 4-3, you can view device IP address, user name, password and port. Please modify the corresponding information to login.

Please note the port information here shall be identical with the port value you set in TCP port in Web Network interface. Otherwise, you cannot login the device.

If you are using device background upgrade port 3800 to login, other setups are all invalid.

Login		×
IP Address:	192.168.1.108	
User Name:	admin	
Password:	90908-909 909	
Port:	37777	
	Login Cancel	

Figure 4-3 Login prompt

After you logged in, the configuration tool main interface is shown as below. See Figure 4-4.

	DHCP Enable	IPv4	•	
IP Address:	192.168.1.108			
Subnet Mask:	255.255.0.0			
Gateway:	10.15.0.1			
Mac Address:	90:02:a9:7f:d8:21			
			Save	Return



For detailed information and operation instruction of the quick configuration tool, please refer to the *Quick Configuration Tool User's Manual* included in the resources CD.

5 Web Operation

This series network camera products support the Web access and management via PC. Web includes several modules: Monitor channel preview, system configuration, alarm and etc.

5.1 Network Connection

Please follow the steps listed below for network connection.

- Make sure the network camera has connected to the network properly.
- Please set the IP address, subnet mask and gateway of the PC and the network camera respectively. Network camera default IP address is 192.168.1.108. Subnet mask is 255.255.255.0. Gateway is 192.168.1.1
- Use order ping ***.***.***(* network camera address) to check connection is OK or not.

5.2 Login and Main Interface

Open IE and input network camera address in the address bar. See Figure 5-1.

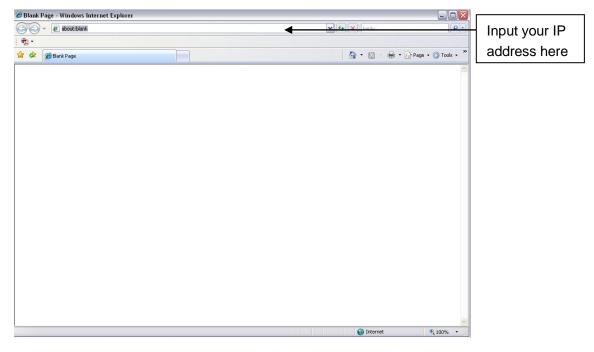


Figure 5-1 IP address

The login interface is shown as below. See Figure 5-2.

Please input your user name and password.

Default factory name is admin and password is admin.

Note: For security reasons, please modify your password after you first login.

IP Camera	
Password: Login Cancel	

Figure 5- 2 Web login

After you successfully logged in, please install WEB plug-in unit. Please refer to the Web Operation Manual included in the resource CD for detailed operation instruction. See Figure 5- 3.

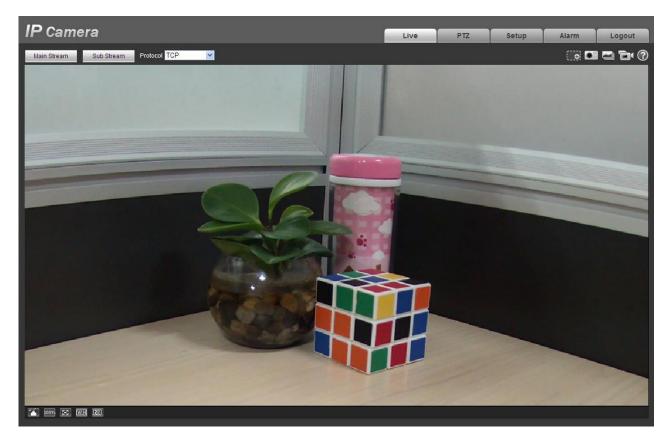


Figure 5-3 Web monitoring window

6 FAQ

Bug	
I can not boot up the device.	Please click RESET button for at least five seconds to restore factory default setup.
I can not upgrade the device via network.	When network upgrade operation failed, you can use port 3800 to continue upgrade.
Save setup	Please use active device for the audio monitor input, otherwise there is no audio in the client-end.
Power adapter	General power adapter work temperature ranges from 0°C to 40°C. It may result in unstable performance if it works in the extremely too hot or too cold environments. In this case, you may need to use the industrial-level power adapter.

Appendix Toxic or Hazardous Materials or Elements

Component Name	Toxic or Hazardous Materials or Elements							
	Pb	Hg	Cd	Cr VI	PBB	PBDE		
Circuit Board Component	0	0	0	0	0	0		
Device Construction Material	0	0	0	0	0	0		
Wire and Cable	0	0	0	0	0	0		
Packing Components	0	0	0	0	0	0		
Accessories	0	0	0	0	0	0		

O: Indicates that the concentration of the hazardous substance in all homogeneous materials in the parts is below the relevant threshold of the SJ/T11363-2006 standard.

X: Indicates that the concentration of the hazardous substance of at least one of all homogeneous materials in the parts is above the relevant threshold of the SJ/T11363-2006 standard. During the environmental-friendly use period (EFUP) period, the toxic or hazardous substance or elements contained in products will not leak or mutate so that the use of these (substances or elements) will not result in any severe environmental pollution, any bodily injury or damage to any assets. The consumer is not authorized to process such kind of substances or elements, please return to the corresponding local authorities to process according to your local government statutes.

Note

- This user's manual is for reference only. Slight difference may be found in user interface.
- All the designs and software here are subject to change without prior written notice.
- If there is any uncertainty or controversy, please refer to the final explanation of us.
- Please visit our website for more information.